
Assembly Instruction

Driving cap floor assembly kit for TAMIYA Scania R470/R620 (1:14,5)
In connection with a Hauber conversion kit and suitable for mounting brackets (2017-9891-02)
- cab bed + Expansion Kit -

Best.-Nr.: 2017-9001-H06W

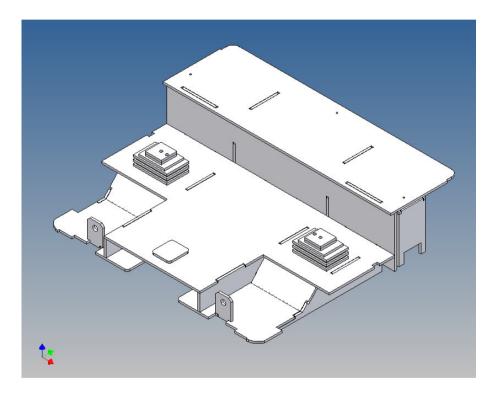

Version 1.0 - 23.12.2017

General Description

This kit includes parts for a driving cab floor for the TAMIYA Scania R470 (4-wheeler) or the Scania R620 (6-wheeler).

The cab floor will be mountet under the original driver seat holder to hide the view onto the RC equipment through the windshield.

When assembling the floor, it is assumed that the simple stair tread of the Hauber conversion kit has been fixed directly to the black base plate using mounting brackets (Order No. 2017-9891-02).

On the one hand, the cab floor is inserted into the free-standing dashboard screws, and on the other hand it is bolted to the bed unit by means of 2 self-tapping screws. The bedin turn is attached to the cab via 3 contact surfaces (left, right and centre back)

When using the original Tamiya gearbox, an opening can be opened in the front part of the bottom for the top screw dome of the gearbox unit. Otherwise the kit has a cover plate for this opening.


The seats have their own consoles for direct bolting to the floor.


Assembly Procedure


Before you put the parts together please read the assembly instructions carefully and pay attention to the assembly sequence and test the fitting accuracy of the parts before gluing them together.


The parts are made of polystyrene, if you use super-glue in combination with activator spray, please be aware that the activator spray can destroy polystyrene – because of that you should use it very carefully or use only polystyrene-glue.


It is helpful to fix the parts at first only on a few points with super-glue and after a check along the edges fully with super-glue or a polystyrene-glue.

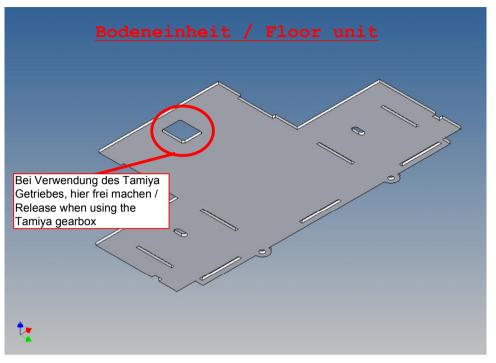


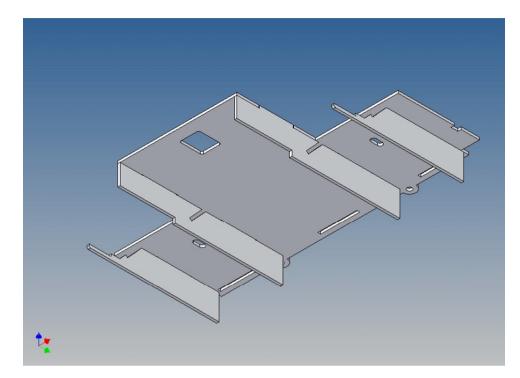


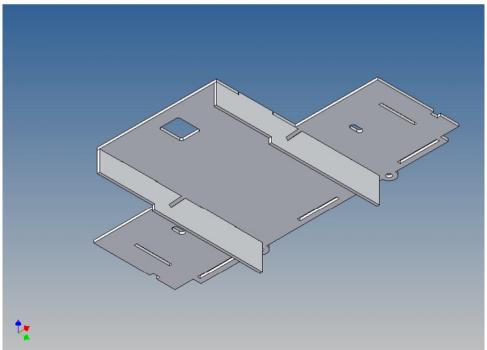


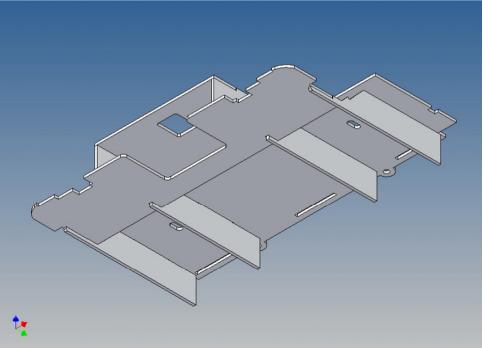


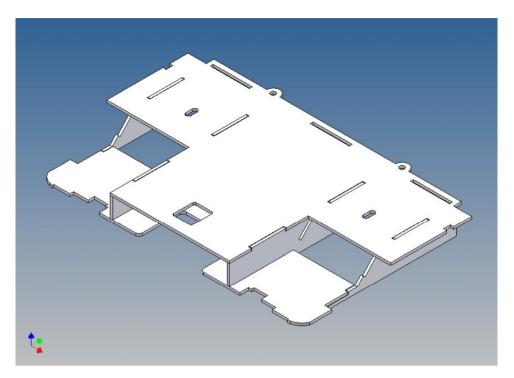


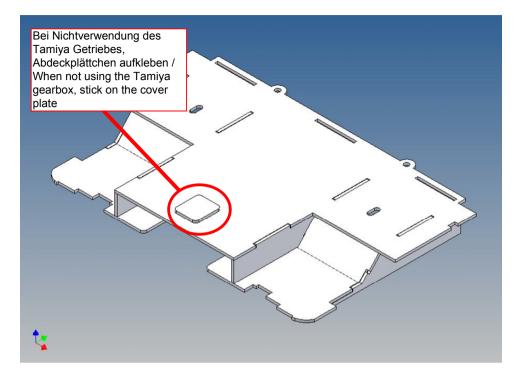


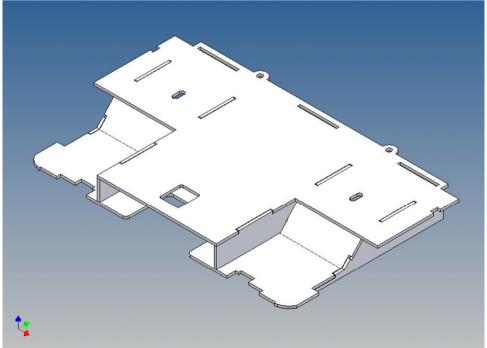


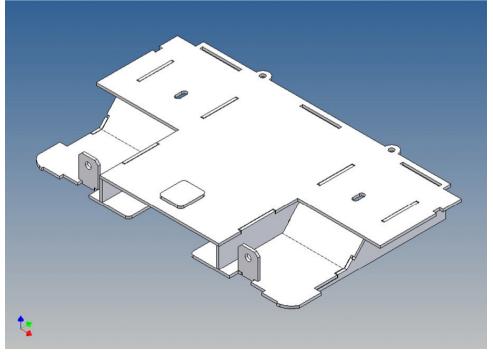


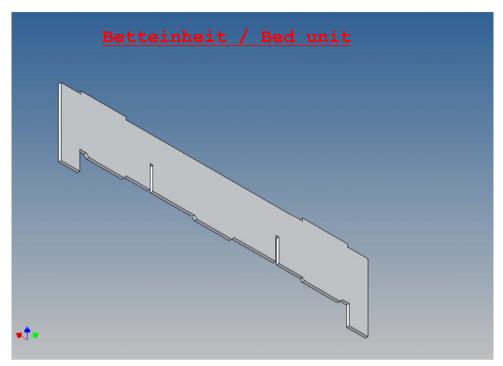


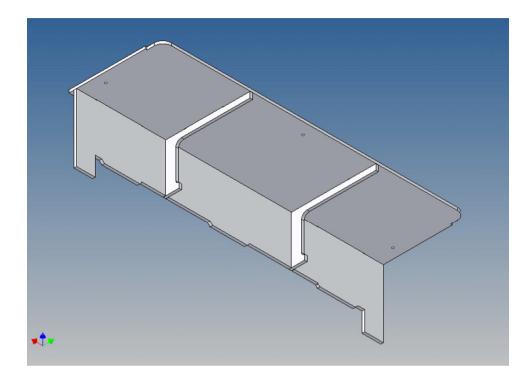


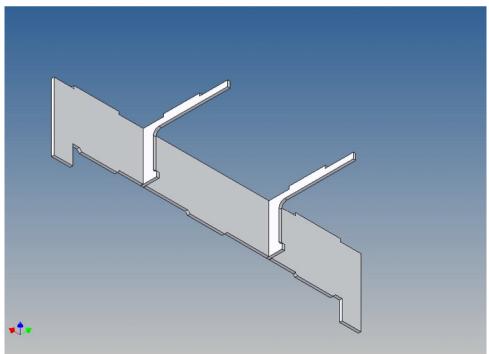


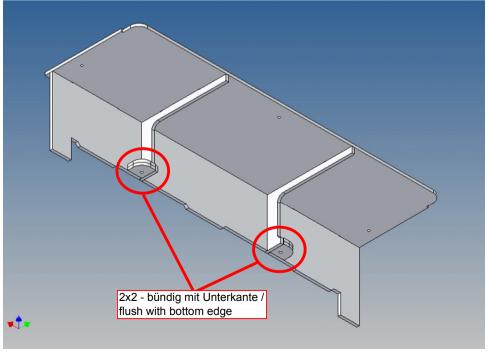


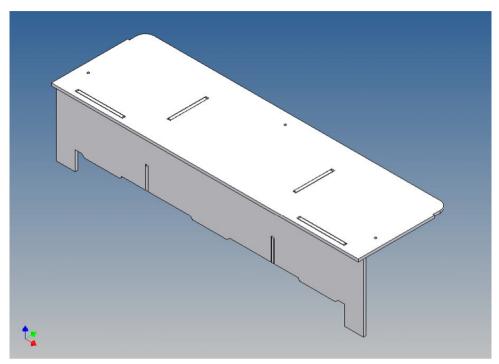


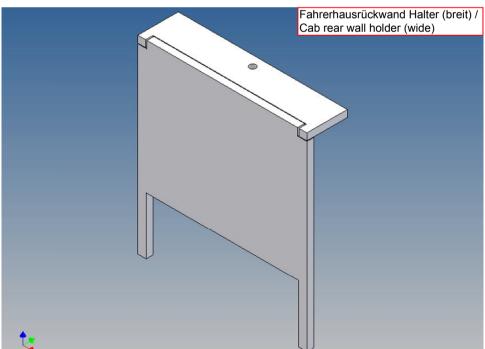


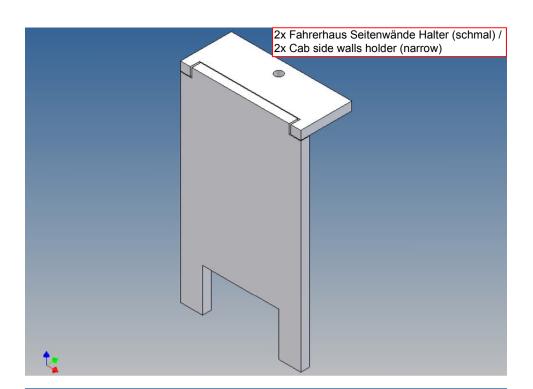


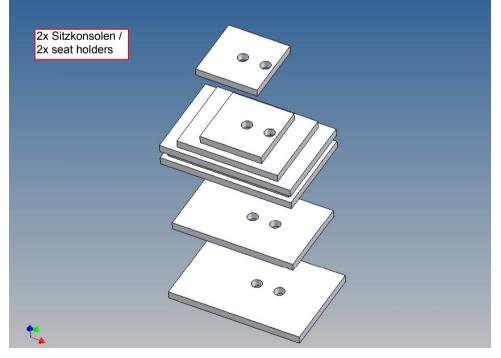

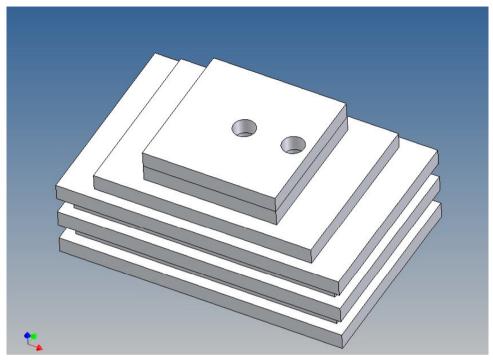

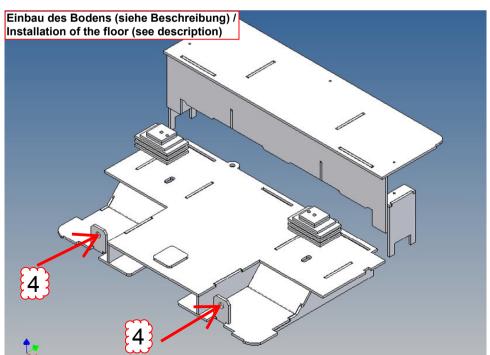

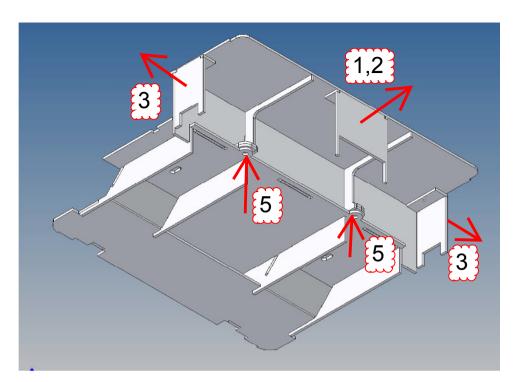

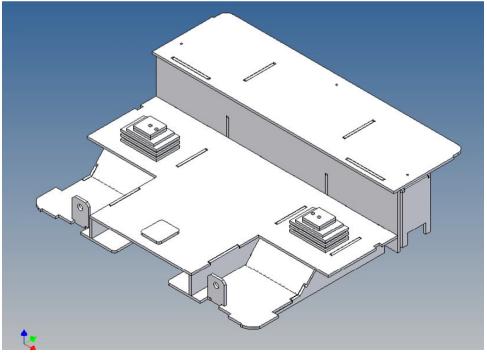

Installation steps:

- 1. Mount the rear wall holder (wide) on centering pin unit and fix it with double-sided adhesive tape.
- 2. Place the bed unit on the support surface of the rear wall mount and secure it with a 2.2x4.5mm screw.
- 3. For better stability, screw the side wall brackets (narrow) on the left and right to the bed unit (2.2x4.5mm each) and then attach them to the cab with double-sided adhesive tape.
- 4. The base unit is now attached to the dashboard screws with the aid of the front hole holders.
- 5. Now the floor unit and the bed unit screwed together (2,2x6,5mm)

Annotation:

Good luck and have fun - your MDTechShop team

www.MDTechShop.de

For questions or replacement part requests please send a short e-mail.

Warning:

This is not a toy! It contains small parts! Keep it away from young children!